


INSTALLATION GUIDE MODEL #: EOL-WL13BK-3100se / EOL-WL14WH-3100se

LED Residential Fixture LED Wall/Ceiling Light Series

Questions?

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday E-mail: info@eurilighting.com

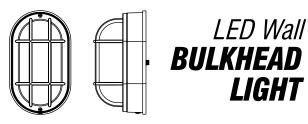


PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION


WARNINGS CAUTIONS · Risk of fire / electrical shock • Do not use with dimmers. • LED Fixture installation requires knowledge of luminaire electrical • Do not look directly at the operating LED Fixture. • Do not touch this product with wet hands. • Risk of electric shock – disconnect power at source before installation • Do not disassemble, repair or alter lamp. • Do not make or alter any open holes in an enclosure of wiring or • Designed for outdoor applications only. electrical components during installation. • Suitable for wet locations. • If lamp or luminaire exhibits abnormal operation (buzzing, flickering, • The luminaires shall be grounded. minimal light, etc.), turn off power, remove fixture. • Be careful not to touch the lamp pins to the metal housing when installing. · This Device is not intended for use with emergency exits or emergency lights.

INSTALLATION INSTRUCTIONS


Step 1: Remove the top cover and glass

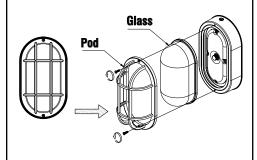


Step 2: Remove the plate

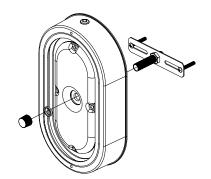


Step 3: Fix the plate

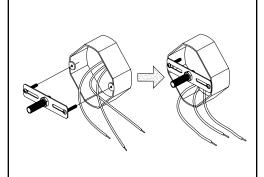

Step 4: Wiring and securing the fixture

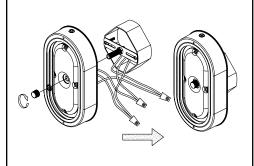

Step 5: Fix the top cover and glass

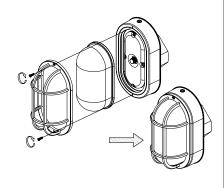

Step 6: Done

